

SPECIFICATIONS - 2" DEFLECTION SPRING										
Model	PIPE SIZE	А	В	н	х	L	øD	ød	s	М
	Nom.	in	in	in	in	in	in	in	in	in
ISSFRSM-2-100-1500	3	4.00	7.00	6.65	2.00	8.48	3.50	8.00	1/2	1/2
ISSFRSM-2-100-1500	4	4.00	7.00	6.65	2.00	9.20	4.50	8.00	1/2	1/2
ISSFRSM-2-100-1500	6	4.00	7.00	6.65	2.00	10.45	6.63	10.00	1/2	1/2
ISSFRSM-2-100-1500	8	4.00	7.00	6.65	2.00	11.53	8.63	12.00	1/2	1/2

SPECIFICATIONS - 3" DEFLECTION SPRING										
Model	PIPE SIZE	А	В	н	х	L	øD	ød	s	М
	Nom.	in	in	in	in	in	in	in	in	in
ISSFRSM-3-100-1500	3	4.00	7.00	6.65	3.00	8.48	3.50	8.00	1/2	1/2
ISSFRSM-3-100-1500	4	4.00	7.00	6.65	3.00	9.20	4.50	8.00	1/2	1/2
ISSFRSM-3-100-1500	6	4.00	7.00	6.65	3.00	10.45	6.63	10.00	1/2	1/2
ISSFRSM-3-100-1500	8	4.00	7.00	6.65	3.00	11.53	8.63	12.00	1/2	1/2

SPECIFICATIONS - 4" DEFLECTION SPRING										
Model	PIPE SIZE	A	В	н	х	L	øD	ød	s	М
	Nom.	in	in	in	in	in	in	in	in	in
ISSFRSM-4-100-1500	3	4.00	7.00	6.65	4.00	8.48	3.50	8.00	1/2	1/2
ISSFRSM-4-100-1500	4	4.00	7.00	6.65	4.00	9.20	4.50	8.00	1/2	1/2
ISSFRSM-4-100-1500	6	4.00	7.00	6.65	4.00	10.45	6.63	10.00	1/2	1/2
ISSFRSM-4-100-1500	8	4.00	7.00	6.65	4.00	11.53	8.63	12.00	1/2	1/2

SPECIFICATIONS - 5" DEFLECTION SPRING										
Model	PIPE SIZE	А	В	н	х	L	øD	ød	s	М
	Nom.	in	in	in	in	in	in	in	in	in
ISSFRSM-5-100-1500	3	4.00	7.00	6.65	5.00	8.48	3.50	8.00	1/2	1/2
ISSFRSM-5-100-1500	4	4.00	7.00	6.65	5.00	9.20	4.50	8.00	1/2	1/2
ISSFRSM-5-100-1500	6	4.00	7.00	6.65	5.00	10.45	6.63	10.00	1/2	1/2
ISSFRSM-5-100-1500	8	4.00	7.00	6.65	5.00	11.53	8.63	12.00	1/2	1/2

## Notes

• Insulation not shown. Pipe must be insulated once gussets are welded to pipe and pipe is floating on springs.

## **Installation Instructions**

- 1. Follow Submittal package, locate spring isolators at their designated locations on both sides of the pipe, as shown in
- 2. Center spring assemblies with C3x6 Stainless Steel C Channel (by others) as shown in pictures above and weld Gussets on both sides accordingly. Once C Channels are welded to spring assemblies, weld C Channels to pipe on both sides. Welds must conform to CSA-W59 latest edition.
- 3. Anchor Spring Support plate to concrete slab as shown.
- $4. \ Spring \ Assemblies \ are \ Factory \ Pre-compressed \ no \ spring \ adjustment \ is \ required \ on \ site see \ final \ installation \ figure \ 2$
- 5. Once all springs re installed for the entire pipe riser system, remove the Riser Spring Block Bolts as shown. Pipe must be floating on springs once Riser Spring Blocks are removed.



## FLOATING RISER SYSTEM -STAINLESS STEEL

File No.: ISOCS-ISSFRSM-1-5-100-1500

Date: 09/23/21

ISOIN-ISSFRSM-1-5-100-1500, Installation Instructions document, to be reviewed for installation

Figure 1



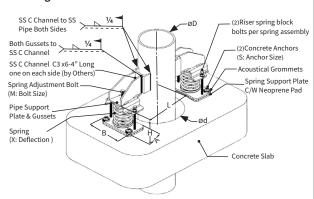


Figure 2



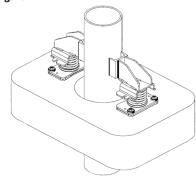

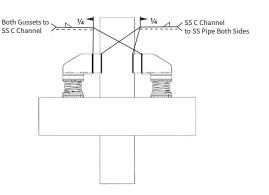

**USA Location** 

Suite 800

7700 Irvine Centre Drive

Irvine, CA, 92618 U.S.A T: 949-788-2930



COPYRIGHT: UNLESS OTHERWISE AGREED OR STATED IN WRITING, ALL INFORMATION AND DESIGNS DISPLAYED WITHIN ARE ALL THE PROPERTY OF ISOTECH INDUSTRY INC. AND MAY NOT BE DUPLICATED OR DISTRIBUTED OUTSIDE OF ISOTECH INDUSTRIES INC. WITH THE EXCEPTION OF AUTHORIZED PERSONS WITH LEGITIMATE NEED TO KNOW WHO BY THE USE OF THIS RECOGNIZE ISOTECH INDUSTRIES INC. OWNERSHIP AND WILL COMPLY TO MAINTAIN THIS INFORMATION AND DESIGN IN STRICT CONFIDENCE.